

HP0-086 braindumps

HP Certification III

HP0-086: HP Bladesystem p-Class Solutions 1

Practice Exam: HP0-086 Exams

Exam Number/Code: HP0-086

Exam Name: HP Bladesystem p-Class Solutions 1

Questions and Answers: 120 Q&As

([Certification III](#))



Exam : [HP0-086](#)

"HP Bladesystem p-Class Solutions 1", also known as HP0-086 exam, is a HP certification. With the complete collection of exam questions, Just4Study has assembled to take you through 120 Q&As to your HP0-086 exam preparation. In the HP0-086 exam resources, you will cover every field and category in HP Certification helping to ready you for your successful HP Certification.

The exam questions cover the latest real test and with all the correct answer. we promise the Q&A for HP Certification III HP0-086 (HP Bladesystem p-Class Solutions 1) examination of original title complete coverage. HP0-086 exam questions help you pass the exam.

Just4Study HP0-086 Feature:

* High quality - High quality and valued for the HP0-086 Exam: 100% Guarantee to Pass Your HP0-086 exam and get your Certification III certification.

* Authoritative - Authoritative braindumps with complete details about HP0-086 exam.

* Cheaper - Our Just4Study products are cheaper than any other website. With our completed Certification III resources, you will minimize your **HP Certification III** cost and be ready to pass your HP0-086 exam on Your First Try, 100% Money Back Guarantee included!

* Free - Try free Certification III demo before you decide to buy it in <http://www.Just4Study.com>.

Just4Study Guarantee:

Just4Study provides the most competitive quality of all exams for the customers, we guarantee your success at the first attempt with only our Certification Question&Answers, if you do not pass the HP0-086 exam at the first time, we will not only arrange FULL REFUND for you, but also provide you another exam of your claim, ABSOLUTELY FREE!

Free HP0-086 Demo Download

Just4Study offers free demo for Certification III HP0-086 exam (HP Bladesystem p-Class Solutions 1). You can check out the interface, question quality and usability of our practice exams before you decide to buy it. We are the only one site can offer demo for almost all products.

The Questions & Answers cover the latest real test and with all the correct answer. we promise the Q&A for **HP Certification III HP0-086** examination of original title complete coverage. HP0-086 Questions & Answers help you pass the exam. Otherwise, we will give you a full refund.

VUE/Prometric Code: HP0-086

Exam Name: HP Bladesystem p-Class Solutions 1(Certification III)

Questions and Answers: 120 Q&A

[HP HP0-086](#) Test belongs to one of the Certification III certified test, if needs to obtain the Certification III certificate,

you also need to participate in other related test, the details you may visit the [Certification III](#) certified topic, in there, you will see all related Certification III certified subject of examination.

Just4Study professional provide Certification III HP0-086 the newest Q&A, completely covers HP0-086 test original topic. With our complete Certification III resources, you will minimize your Certification III cost and be ready to pass your HP0-086 tests on Your First Try, 100% Money Back Guarantee included!

Just4Study Help You Pass Any IT Exam

Just4Study.com offers incredible career enhancing opportunities. We are a team of IT professionals that focus on providing our customers with the most up to date material for any IT certification exam. This material is so effective that we Guarantee you will pass the exam or your money back.

Exam : HP HP0-086

Title : HP BladeSystem p-Class Solutions I

1. You have a fully populated enhanced server blade enclosure. You connect your laptop with a crossover cable to the RJ-45 port of the local I/O cable and insert the other end of the local I/O cable into the local I/O port in the front of blade 3. You then set your laptop to the IP address 192.168.1.2 and the subnet mask 255.255.255.0. When you enter http://192.168.1.1 in the Microsoft Internet Explorer address field, you receive the "Page not found" error message.

Why?

- A. The default IP address of the iLO is 192.168.0.1.
- B. The iLO Advanced firmware is older than version 1.64 and must be upgraded first.
- C. The local I/O cable is already a crossover cable, thus another crossover cable is not required.
- D. The power enclosure and the server blade enclosure management ports are not cabled or cabled incorrectly.

Answer: C

2. How do the HP ProLiant BL p-Class server blades support network attached storage (NAS)? (Select two.)

- A. through the embedded network adapters
- B. through optional multifunction network adapters
- C. through optional mezzanine or balcony host bus adapters
- D. through the additional NIC ports on the front of the interconnect switches
- E. through the additional NIC ports on the back of the interconnect switches

Answer: AB

3. What is the recommended environment for using high-voltage modular power distribution units (PDUs)?

- A. when using 1U power enclosures
- B. when using 3U, single-phase power enclosures
- C. when using 3U, three-phase power enclosures and redundant power
- D. when using 3U, three-phase power enclosures and non-enhanced server blade enclosures

Answer: A

4. What is the recommended environment for using high-voltage PDUs?

- A. when using single-phase power and 3U power enclosures
- B. when using facility DC power with a fully-populated 42U rack
- C. when using 3U power enclosures with the non-enhanced server blade enclosures
- D. when using a large number of server blades that place a high load on the power bus
- E. when using the enhanced server blade enclosure in a redundant power configuration

Answer: D

5. How many server-facing Fibre Channel ports are included in the Brocade 4Gb SAN switch for the HP BladeSystem?

- A. 4

- B. 8
- C. 12
- D. 16

Answer: B

6. When must the load-balancing cable be installed?

- A. when one or more power enclosure pairs are installed in a rack
- B. when an odd number of power enclosures are installed in a rack
- C. when a three-phase power enclosure is connected to the original server blade enclosure
- D. when one power enclosure provides redundant power to the original server blade enclosure

Answer: A

7. Which UPS supports the p-Class infrastructure and is 3U high?

- A. HP R1500XR
- B. HP R3000XR
- C. HP R5500XR
- D. HP R12000XR

Answer: C

8. You connect to the iLO of a ProLiant BL20p G2 server blade through the Ethernet port. The iLO web interface does not display the BL p-Class tab. Why?

- A. The BL p-Class tab is disabled by default.
- B. The iLO firmware is older than version 1.64.
- C. The iLO Advanced is not licensed in the HP BladeSystem Integrated Management.
- D. The BL p-Class tab is only available when accessing the iLO through the local I/O port.

Answer: B

9. Which HP SIM plug-in component enables scanning for and patching of network vulnerabilities?

- A. PIM
- B. PMP
- C. VMM
- D. VPM

Answer: D

10. You have an enhanced server blade enclosure fully populated with ProLiant BL35p server blades. You connect to the bottom server blade in server bay 1 using the local I/O cable, and want to enable the Static IP Bay Configuration feature to automatically assign IP addresses to all server blade iLOs in the enclosure. However, the Static IP Bay Configuration option is not available. Why?

- A. A DHCP server exists on your network.
- B. You are not connected to the first server blade in the first bay.
- C. The management module on the back of the server blade enclosure is incorrectly configured.
- D. The power enclosure and the server blade enclosure management ports are not cabled or cabled incorrectly.

Answer: B

11. You have an enhanced server blade enclosure connected to a single 3U power enclosure. Only side A of the server blade enclosure is connected to the power enclosure. Which server blade enclosure bays receive DC power?

- A. bays 1 through 8
- B. bays 1 through 8, plus the interconnect bays
- C. bays 1 through 4, plus the interconnect bays
- D. bays 1 through 4, plus the interconnect bay on side A
- E. bays 5 through 8, plus the interconnect bay on side A

Answer: C

12. Which configuration requires two power zones to be enabled on the power enclosure management modules?

- A. any configuration that mixes a single phase and three-phase power
- B. full 42U rack with four 3U power enclosures connected by mini bus bars
- C. full 42U rack with four 3U power enclosures connected by scalable bus bars
- D. any configuration that has two or more 3U power enclosures connected to the facility DC power

Answer: B

13. Which HP server blade uses a Fibre Channel loop to combine two internal SAN port connections to a single external physical connection?

- A. ProLiant BL35p
- B. ProLiant BL45p
- C. ProLiant BL20p G2
- D. ProLiant BL20p G3

Answer: A

14. You are configuring an enhanced server blade enclosure that is fully populated with BL35p server blades to boot Windows Server 2003 from a single MSA1000 storage solution. What is the minimum number of logical units (LUNs) you must create on the MSA1000?

- A. 2
- B. 4
- C. 8
- D. 16

Answer: D

15. You are creating a VLAN on a GbE2 Interconnect Switch. This VLAN must include the crosslink ports. Which ports must you include?

- A. ports 1 and 2
- B. ports 3 and 4
- C. ports 15 and 16
- D. ports 17 and 18

Answer: D

16. Which power distribution option requires the dual power input kit for power redundancy?

- A. mini bus bar
- B. power bus box
- C. scalable bus bar
- D. facility DC power

Answer: A

17. What is the maximum combination of power and enhanced server blade enclosures that can be connected to a mini bus bar?

- A. 1 power and 2 server blade enclosures
- B. 1 power and 3 server blade enclosures
- C. 2 power and 2 server blade enclosures
- D. 2 power and 3 server blade enclosures

Answer: D

18. What is the default administrator account username and password for the Brocade 4Gb SAN Switch?

- A. admin/admin
- B. admin/password
- C. administrator/<blank>
- D. administrator/password

Answer: B

19. What is the default user name and password for the GbE2 Interconnect Switch administrator account?

- A. user name: <blank>, password: hp
- B. user name: admin, password: admin
- C. user name: admin, password: compaq
- D. user name: Administrator, password: password

Answer: B

20. When accessing the iLO BL p-Class tab, you receive the "Unable to collect rack data" error message. Why? (Select two.)

- A. At least one server blade iLO is not configured.
- B. You have not yet licensed all server blade iLOs.
- C. At least one management module has mismatched firmware.
- D. A DHCP server exists on the network and conflicts with the Static IP Bay Configuration feature.
- E. At least one power enclosure or server blade enclosure does not meet the minimum firmware requirements.

Answer: CE

[HP0-086 Braindumps](#)

Related HP0-086 Exams

[HP0-S16](#) *Implementing HP BladeSystem*

[HP0-J26](#) *Designing and Implementing HP SAN Solutions*

[HP0-D04](#) *Planning and Designing HP Enterprise Solutions*

[HP0-P13](#) *Planning & Design of HP Integrity Server Solutions*

[HP0-M23](#) *HP Business Availability Center Foundation*

[HP0-918](#) *HP Storage Data Protector 6.0 Fundamentals for Windows*

[HP0-M28](#) *Implementing HP Asset Manager Software*

[HP0-239](#) *Supporting the Modular Array(MA) Storage Family*

[HP0-080](#) *HP Multi-User System Product T500/T600 Certification*

[HP0-286](#) *HP Openview Servicecenter 6.x*

[HP0-205](#) *Supporting the Enterprise Modular Library*

[HP0-265](#) *Servicing HP Color LaserJet MFP Printers,High-End*

[HP0-144](#) *ProCurve Secure WAN*

[HP0-263](#) *Servicing HP Color LaserJet Printers, High-End*

[HP0-266](#) *Servicing HP Monochrome LaserJet MFP Printers,High-End*

[HP0-S14](#) *Design & Implementation of HP SIM for ISS Solutions*

[HP0-084](#) *HP Integrity Server Multi-OS Installation&Deployment*

[HP0-240](#) *Supporting the Virtual Array(VA) Storage Family*

[HP0-J27](#) *Advanced SAN Architecture*

[HP0-Y18](#) *ProCurve Mobility*

Other HP Exams

[HP0-003](#) [HP0-P12](#) [HP0-S23](#) [HP0-762](#) [HP0-S19](#) [HP0-401](#) [HP0-753](#) [HP0-918](#)

[HP0-T01](#) [HP0-P16](#) [HP0-S13](#) [HP0-780](#) [HP0-628](#) [HP1-P44](#) [HP0-M18](#) [HP0-773](#)

[HP0-M19](#) [HP0-601](#) [HP0-263](#) [HP0-285](#)